

Toyota Rav4 06-on Rear Toe Adjuster Rod End



UNASSEMBLED



Care must be taken when removing the rod end during disassembly. Remove the complete unit from the vehicle for end replacement. Wind back the adjusting sleeve until the rod end will turn freely, then disassemble. Failure to do this will result in the locating tabs on the rod end & bushed end to break. During reassembly, ensure the locating tabs on each end are aligned properly, and pull together mating surfaces using the adjusting sleeve.

Available Now!

E.& O.E.

VIC - Phone 1300 651 551 Fax 1300 651 451
QLD - Phone 1300 559 086 Fax 1300 559 842