


TR4610, TR4554 and TR4560 TIE ROD END ADJUSTMENT ASSEMBLY INSTRUCTIONS

The internal tie rod end components are inserted in the following order - including... Spacer, Spring, Seat, Ball Stud, Seat, End Plug, Split Pin.

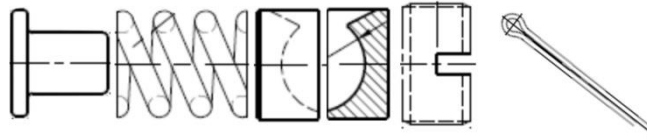

During fitment the End Plug must be fully tightened to fully compress the spring, then backed off to allow for the required ball stud rotational torque, as per manufacturers specifications.

The split pin must be fitted into grooved End Plug, following correct assembly & fitment, to lock into place.

This unit is greasable. It requires full greasing upon fitment, and re-greasing on each service. Failure to grease adequately will void warranty.

TECRUISER 01/10/2011
