

LOAD HANDLING MADE EASY!



Using the Load Handler® is easy! Simply fit the load handler to the tailgate of your ute and unfurl the dragsheet across the ute bed. Take on the load. When you've arrived at your destination, drop the tailgate, insert the crank and unload.

No shoveling, no climbing, no bad back,

The Load Handler® is easy to install, going on or coming off in less than a minute. Belting onto the tailgate, the handler is installed with no drilling or welding. The handler has the ability to unload up to 3000lbs of material from your ute in 30 seconds.



LOAD HANDLER®



LH3000	Heavy Duty Large Ute/ Trailer Load Handler - 700kg capacity, 1300mm wide x 4600mm long
LH3000M	Heavy Duty Regular Ute/ Trailer Load Handler - 700kg capacity, 1070mm wide x 4600mm long
LH2200	Large Ute/ Trailer Load Handler - 500kg capacity 1300mm wide x 4600mm long
LH2200M	Regular Ute/ Trailer Load Handler - 500kg capacity, 1070mm wide x 4600mm long

NOW AVAILABLE