
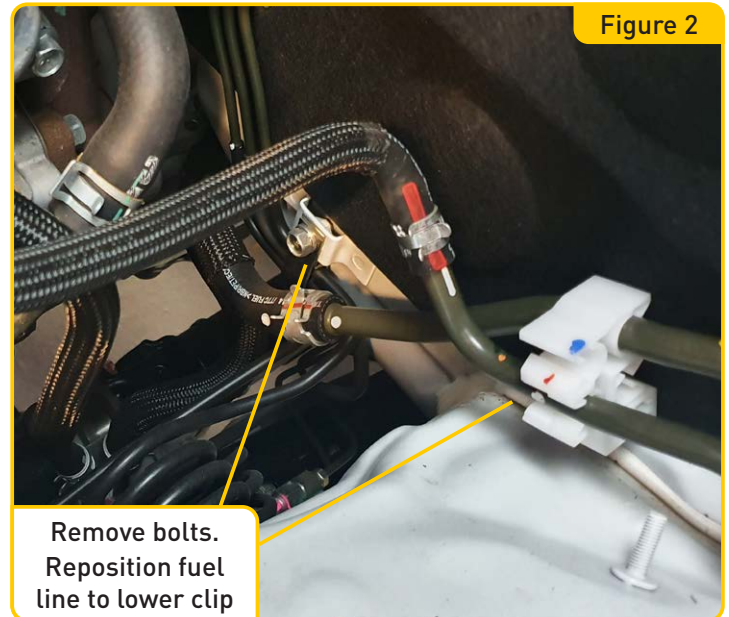


**VEHICLE** Mitsubishi MQ & MR Triton / QE Pajero Sport  
**MODEL YEAR** 2016 - onwards  
**PRODUCT** Auxiliary Battery Tray  
**PRODUCT CODE** BT101

#### Battery Tray Details

Fits up to N50  
Comes with: 3 x M8 bolts, nuts & washers, 1 x Hold Down with J-Hooks

1. Bolt removable leg to battery tray.
2. Remove relay bracket and wiring retainer bracket from the inner wheel arch.
  - a. Remove relay from bracket.  
See figure 1
3. Relocate fuel line to lower section of clip as shown in figure 2.
  - a. Remove bolt on firewall as shown in figure 2.
  - b. In this position, the battery tray will be mounted.
4. Reroute main battery wiring harness. This will now be routed under the auxiliary battery tray.
  - a. Be sure to check that the wiring harness is secure and cannot rub on sharp edges.

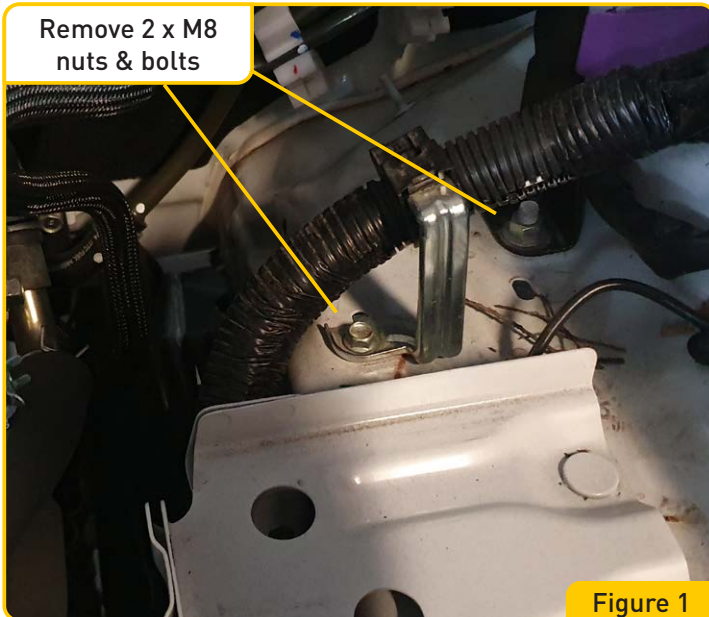

**VEHICLE** Mitsubishi MQ & MR Triton / QE Pajero Sport  
**MODEL YEAR** 2016 - onwards  
**PRODUCT** Auxiliary Battery Tray  
**PRODUCT CODE** BT101

#### Battery Tray Details

Fits up to N50

Comes with: 3 x M8 bolts, nuts & washers, 1 x Hold Down with J-Hooks

5. Fit auxiliary battery tray in position.
  - a. Fit mounting hardware and tighten.
6. Refit relay onto M6 stud and fit supply M6 nut on the side of the battery tray.
7. Use supplied fir tree zip ties to secure hoses away from any sharp edges.

