


**VEHICLE** Colorado D-Max Rodeo  
**MODEL YEAR** 2007 - 2011  
**PRODUCT** Auxiliary Battery Tray  
**PRODUCT CODE** BT013


**Battery Tray Details**  
Fits up to N70zz 12-inch case battery.  
Comes with: 3 x 6mm bolts, nuts & washers and Bracket, 2 x 4mm nuts.

1. Battery Tray fits underneath the vehicle on the drivers side and bolts to the chassis. It sits about 50mm lower than the chassis but no lower than the crossmember.

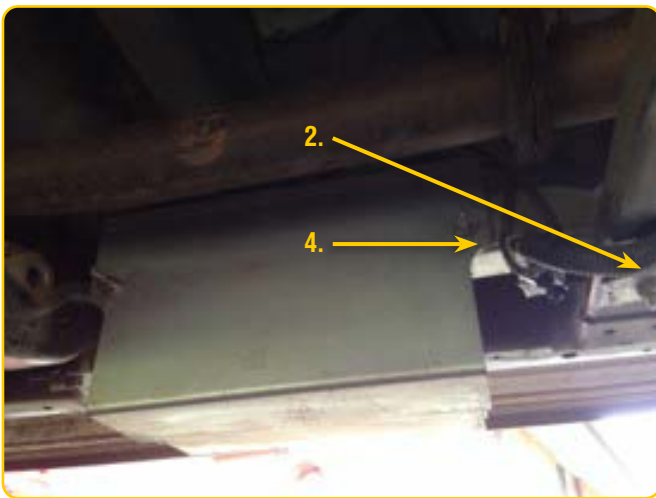

3. There are two holes in the back of the box. Place 2 x 6mm long bolts through holes. One bolt sits on top of the chassis and one under the chassis rail. Place bracket onto bolts. Place nuts on and tighten.

2. Sit Battery Tray into position; the support leg faces towards the rear of the vehicle. Align the hole in the support leg with hole in crossmember. Place 1 x 6mm bolt washers & nut through hole and tighten.

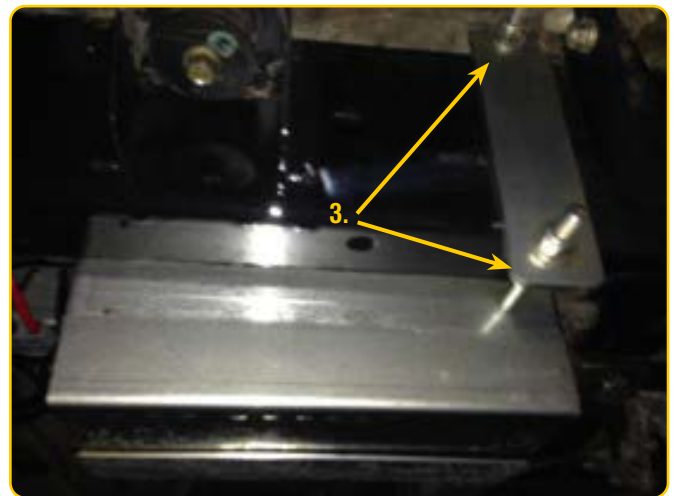

4. Place the battery in the box then place the front cover on and fit 4mm nuts and tighten.

Can points 2 & 3 please be proof read by someone who is more familiar with the fitting process