


SB064 - NP300 NAVARA REAR SHOCK GUARD FITTING GUIDE

1. Remove the lower shock absorber bolt.
2. Remove the upper trailing arm bolt (be advised to only remove one upper trailing arm bolt at a time).
See figure 1.
3. Fit Shock Guard to vehicle. Refit shock absorber in the OE location with the OE bolt.
4. Refit the OE upper trailing arm bolt through the shock guard.
See figure 1.
5. Fit supplied M14 bolt, washers & nut to the upper rearmost hole on the shock mount.
See figure 2.
6. Fit supplied M12 bolt, washers and nut to the underside of the shock mount.
See figure 3.
7. Repeat Step 1 to Step 6 on other side.
8. Tighten all bolts at road height.
9. Cycle suspension travel to ensure there is no interference with other components on the vehicle.

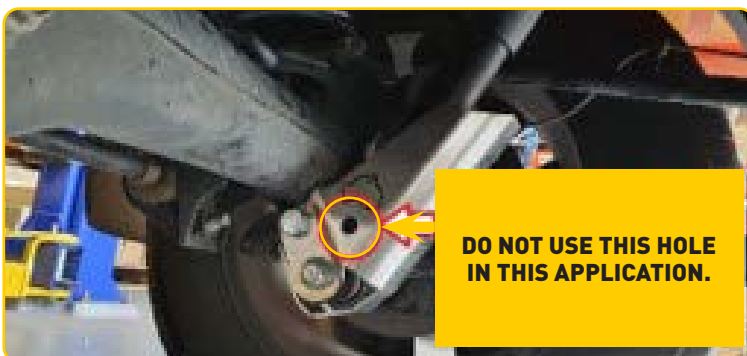

PLEASE NOTE

The hole in this stone guard has not been engineered to take load in its current configuration. DO NOT USE.