

URGENT UPDATE

Ball Joint Installation

We have recently become aware of documentation that recommends that a press-in ball joint can be installed by applying force against the ball stud. **This practice is 100% false and incorrect.**

The only accepted practice of press-in ball joint installation is to apply the press-in force evenly against the ball joint body/housing.


Incorrect installation of press-in ball joints leads to direct loading on internal components and will result in premature wear.

Press-In Force
Applied Directly
to BALL STUD



INCORRECT

Remove Boot &
Apply Press-In Force
Evenly against the
body/housing

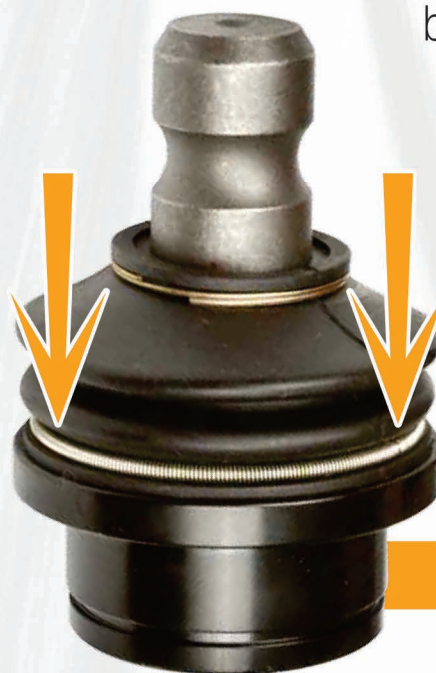

CORRECT

Manufacturers Names used for reference purposes only.