


Ball Joint Installation

**THIS IS INCORRECT & WILL RESULT IN
PREMATURE WEAR**

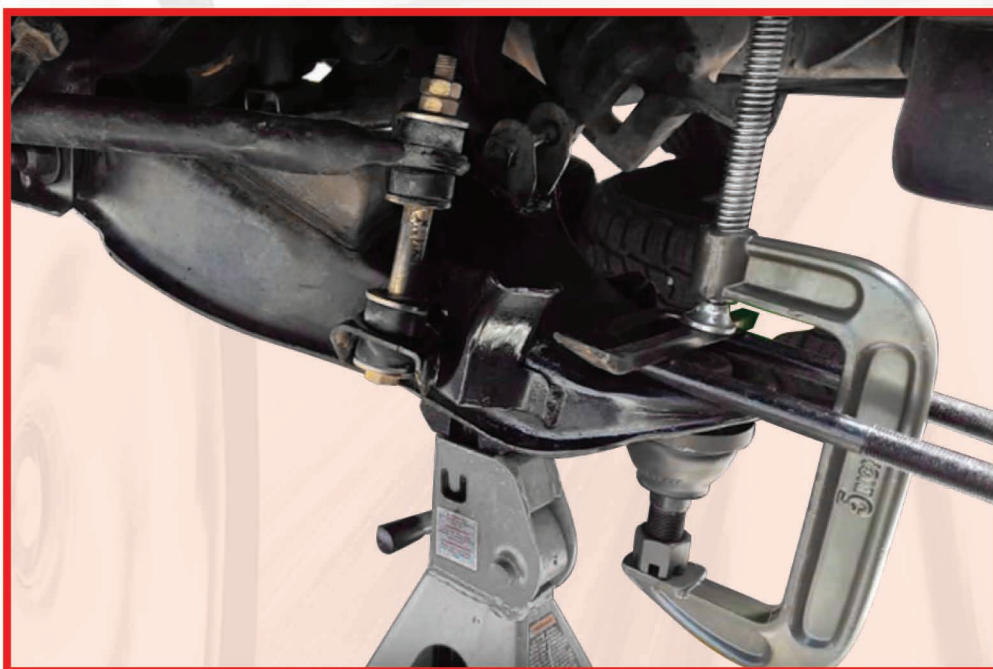

There is only one right way to install a press in ball joint - and that is to press in by applying force to the ball joint housing only. There should be NO FORCE applied to the BALL STUD or PENNY BASE. The internal components are designed to operate under a certain set of conditions. Force loading either the ball stud or penny base during installation is outside of these operating conditions. Application of force to either the ball stud or penny base will damage the dimension critical internal components of the ball joint and will result in premature wear.

Manufacturers Names used for reference purposes only.